


Control panel

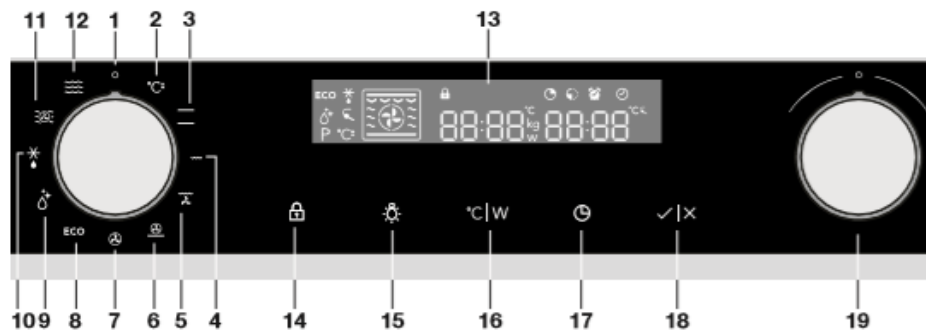

- | | |
|----------------------------|---|
| 1. Off | 11. Microwave + hot air |
| 2. Fast preheat | 12. Microwave |
| 3. Top + bottom heat | 13. Display (cooking information and timer clock) |
| 4. Grill | 14. Child lock |
| 5. Grill + fan | 15. Oven lighting on/off |
| 6. Hot air + bottom heat | 16. Temperature/power |
| 7. Hot air | 17. Timer |
| 8. ECO baking and roasting | 18. Start/Stop |
| 9. Aqua clean | 19. Multi-function selector |
| 10. Defrosting | |

Fast preheating

Use this function to heat the oven to the desired temperature as quickly as possible. *This mode is NOT appropriate for cooking!*

1. Turn the 'Mode selector' to 'fast preheating'.
2. Press the 'Start/Stop' key.

After the oven is switched on with the 'Start/Stop' key, it will start to heat up. When the set temperature is reached, preheating is completed and an acoustic signal will sound.

Using the oven

The oven has 10 oven functions and 1 cleaning function. Consult the instructions on the food to select the right oven function to prepare a dish.

1. Place the dish in the oven.
Attention: for most dishes the oven has to be preheated first. Please do not insert your food in the oven yet, but wait until the preheating is complete.
2. Turn the 'Mode selector' to the desired oven setting.
The selected pictogram will appear on the display.
3. Touch the 'Temperature/power key'.
4. Set the oven to the desired temperature using the 'Multi-function selector' (30-250°C).
5. Select, if required, a cooking time by pressing the 'timer key'.
6. Press the 'Start / Stop' key.

The oven will start the oven function set and heat the oven to the selected temperature. The temperature symbol in the display will flash. When the oven has been reached the selected temperature, the temperature symbol in the display will remain illuminated.

Defrosting

1. Turn the 'Mode selector' to defrosting
2. Turn the 'Multi-function selector' to select the desired program and weight in kilograms.
3. Press the 'Start/Stop' key.

Using the microwave

1. Place the dish in the oven/microwave.
Attention: do not place the dish on the bottom of the oven/microwave
2. Turn the 'Mode selector' to 'Microwave'
3. Select the desired power level using the 'Multi-function selector'
4. Select, if required, a cooking time by pressing the 'timer key'.
5. Press the 'Start/Stop' key.

Power level	Use
1000 W	<ul style="list-style-type: none"> • Quickly reheating beverages, water and dishes containing a large volume of liquid.
750 W	<ul style="list-style-type: none"> • Cooking fresh or frozen vegetables.
600 W	<ul style="list-style-type: none"> • Melting chocolate. • Cooking fish and crustaceans. Reheating in two levels. • Cooking dried beans at low heat.
360 W	<ul style="list-style-type: none"> • Low-heat cooking or dairy products, jam.
180 W	<ul style="list-style-type: none"> • Manual defrosting, softening butter or ice cream.
90 W	<ul style="list-style-type: none"> • Defrosting cream-filled pastry.

Troubleshooting

If you have problems with the oven/microwave, try the solutions suggested below. If the oven/microwave still doesn't work normally, please contact the reception.

Food remains uncooked

- Ensure timer has been set correctly and the 'Start' key is pressed.
- Firmly close door.
- Make sure you have not blown a fuse or triggered a circuit breaker. If so, please contact the reception.

Food is either overcooked or undercooked

- Make sure appropriate cook time was used.
- Make sure appropriate power level was used.

Sparking and cracking (arcing) occur inside the oven.

- Make sure you are using proper cookware without metal trimmings.
- Make sure no forks or other metal utensils have been left inside the oven.
- If using aluminum foil, make sure it is not too close to inside walls.

Electronic interference causes the display to be reset

- Disconnect the power plug and reconnect it.
- Reset the time.

Condensation appears inside the oven

- This is a normal occurrence. Simply wipe away after cooking.

The fan continues to operate after the oven has been turned off.

- This is a normal occurrence. Once the oven has been switched off, the cooling fan may continue to run for a little while.