



Product description

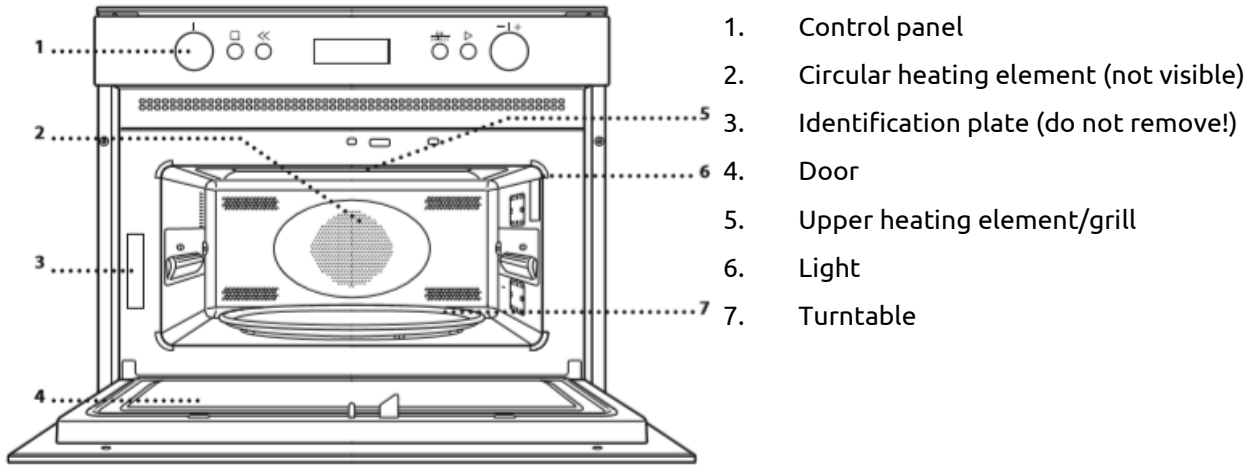

Control panel

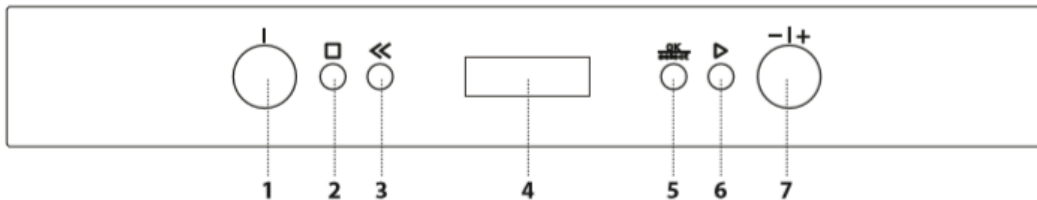

1. *Selection knob:* For switching the oven on by selecting a function. Turn the "0" position to switch the oven off.
2. *STOP:* For stopping the function that is currently active at any time and putting the oven into standby mode.
3. *Back:* For returning to the previous menu.
4. *Display*
5. *Confirmation button:* For confirming a selected function or a set value.
6. *START:* for immediately starting a function.
7. *Adjustment knob:* For scrolling through the menus and applying or changing settings.

Microwave

| Power level | Suggested use |
|-------------|---|
| 900 W | Quickly reheating drinks or other foods with a high water content. |
| 750 W | Cooking vegetables. |
| 650 W | Cooking meat and fish. |
| 500 W | Cooking meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes. |
| 350 W | Slow, gently cooking. Perfect for melting butter or chocolate. |
| 160 W | Defrosting frozen foods or softening butter and cheese. |
| 90 W | Softening ice cream. |

Daily use

1. Select a function: Turn the 'selection knob' until the function you require is shown on the display. The display will show the icon for the function and its basic settings.
Where available, to select an item from the menu, turn the 'adjustment knob' until the item you require is shown. Press 'OK button' to confirm your selection.
2. Set the function: After having selected the function you require, you can change its settings. The display will show the settings that can be changed in sequence. With the setting flashing on the display, turn the 'adjustment knob' to change the setting, then press the 'OK button' to confirm and continue with the settings that follow.
3. Activate the function: Once you have applied the settings you require, press the 'START button' to activate the function.

Troubleshooting

| Problem | Possible cause | Solution |
|--|--|--|
| The oven is not working. | Power cut. Disconnection from the mains. | Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists. |
| The oven makes noises, even when it is switched off. | Cooling fan active. | Open the door or wait until the cooling process has finished. |
| The display shows the letter "ERR" followed by a number. | Software fault. | Contact the reception. |