

Control panel



1. Function knob
2. Power/weight button
3. Quickly preheating button
4. On/off button
5. Temperature/automenu button
6. Clock button
7. Start/pause button
8. Childlock
9. Selection knob

Using the microwave

1. Press the 'On/off button' to activate the microwave function.
'01:00' is blinking in the display and the microwave icon appears in the display.
2. Turn the 'selection button' to set the cooking time. The max. cooking time depends on the power that has been set.
3. Press the 'power/weight button' to adjust the microwave power

Power level	Food
900 W	• Boiling water, reheating, cooking chicken, fish, vegetables.
700 W	• Reheating, cooking mushrooms, shellfish, dishes containing eggs and cheese.
450 W	• Cooking rice, soup.
300 W	• Defrosting, melting chocolate and butter.
100 W	• Defrosting sensitive/delicate food, defrosting irregularly-shaped food, softening ice cream, allowing dough to rise.

4. Turn the 'selection button' to set the microwave power. Press the 'power/weight button' again to confirm the setting or wait for the power to stop blinking in the display.
You will hear a beep.
5. Press the 'start/pause button' to start the cooking process.
When the cooking process is ready, you will hear 5 beeps. The fan continues to operate for some time and then stops automatically.

Using the oven

1. Press the 'On/off button' to activate the microwave function.
'01:00' is blinking in the display and the microwave icon appears in the display.
2. Turn the 'function knob' one position to the right.
The hot air icon is blinking. Time, temperature and the oven icon are shown on the display.
3. Turn the 'selection knob' to the right to choose a mode. If the symbols stop blinking, the chosen mode has been activated. You can go back one step by turning the 'function knob' one position to the left.
4. You can adjust the time and/or the temperature in every mode. Press the 'clock button' or the 'temperature/automenu button'. The time or temperature is blinking. By turning the 'selection knob' you can set the preferred time and/or temperature. To confirm the setting, press the 'clock button' or the 'temperature/automenu button' again.
5. Press the 'start/pause button' to start the cooking process.
When the cooking process is ready, you will hear 5 beeps. The fan continues to operate for some time and then stops automatically.

Combi microwave function

1. Press the 'On/off button' to activate the microwave function.
'01:00' is blinking in the display and the microwave icon appears in the display.
2. Turn the 'function knob' two positions to the right.
The hot air icon is blinking. Time, temperature, the microwave icon and the oven icon are shown in the display.
3. Turn the 'selection knob' to the right to choose a mode. If the symbols stop blinking, the chosen mode has been activated. You can go back one step by turning the 'function knob' one position to the left.
4. You can adjust the power, the time and/or the temperature in every mode. Press the 'power/weight button', the 'clock button' or the 'temperature/automenu button'. The power, time or temperature is blinking. By turning the 'selection knob' you can set the desired powerlevel, time and/or temperature. To confirm the setting, press the 'power/weight button', the 'clock button' or the 'temperature/automenu button' again.
5. Press the 'start/pause' button to start the cooking process.
When the cooking process is ready, you will hear 5 beeps. The fan continues to operate for some time and then stops automatically.

Childlock

You can 'lock' your combi microwave oven, to prevent a cooking process from starting. **Please be sure that the childlock is deactivated before you check out.**

Activating the childlock

1. You can only activate the childlock if the combi microwave oven is switched off.
2. Press the 'temperature/automenu button' and 'start/pause' button at the same time and hold the buttons until you hear a beep.
3. In the display a key icon appears. You cannot operate the combi microwave oven.

Deactivating the childlock

1. Press the 'temperature/automenu button' and 'start/pause' button at the same time and hold the buttons until you hear a beep.
2. In the display a key icon disappears. You can now operate the combi microwave oven again.

Faults

If the microwave oven does not cook as well as it should do, if there is sparking inside it, or if it does not start, etc., first try to find the reason for the problem yourself before calling the reception. If the oven/microwave still doesn't work normally, please contact the reception.

Check:

- Is the plug in the socket?
- Is the door closed properly?
- Have the power level and the cooking time been set properly?
- Are there any objects in the microwave oven which shouldn't be there?
- Are you using the correct cooking utensils?
- Is the turntable in the microwave oven?
- Are the vents blocked?
- Has the food been defrosted sufficiently?
- Did you stir or turn the food during cooking?
- Is the childproof lock turned on?