


OESTERDAM 189

### Using the dryer

1. On/Off button to activate or deactivate the dryer (A).
2. Choose a programm depending on the loading (B).
3. Choose a 'dry selection' (C).
4. Choos a 'dry temperature': 30°C— 90°C (D).
5. Press the 'Start' button (F).

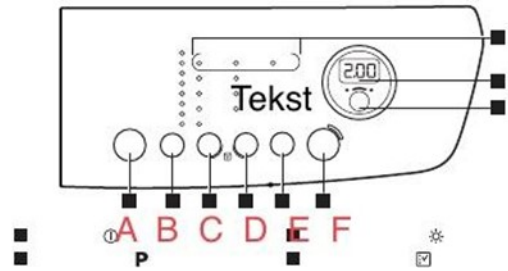

Please clean the filter after using the dryer.

### Troubleshooting

#### Error code *Err* or *E51*

- Solution: turn the dryer off and on to select another programm. When the error code is still visiable on the display, please contact the reception.

On/Off button doesn't work

- Child lock is activated. Solution: press the C and D buttons at both time till the 'Child lock light' goes off.