



Front panel

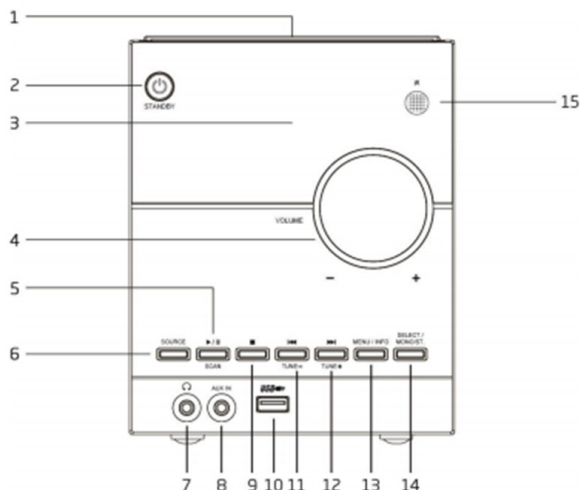

- | | |
|-------------------|---------------------------|
| 1. CD flap | 9. Stop |
| 2. Stand-by | 10. USB jack |
| 3. Display | 11. Tune - |
| 4. - volume + | 12. Tune + |
| 5. Start/Pause | 13. Menu/info |
| 6. Source | 14. Select/mono/ST |
| 7. Headphone jack | 15. IR-connection display |
| 8. AUX-in | |

Remote control

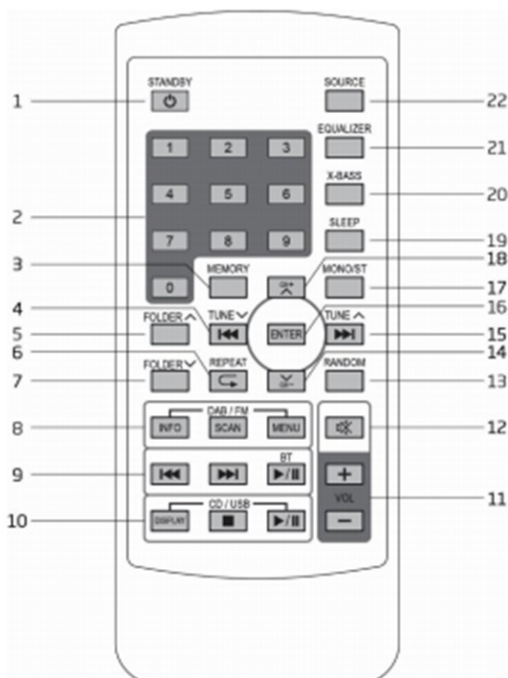

- | | |
|----------------------|-----------------|
| 1. Standby | 12. Mute |
| 2. Numeric buttons | 13. Random |
| 3. Memory | 14. CH- |
| 4. Previous/tune v | 15. Next/tune ^ |
| 5. Folder v | 16. Enter |
| 6. Repeat | 17. Mono/ST |
| 7. Folder ^ | 18. CH+ |
| 8. Info/scan/menu | 19. Sleep |
| 9. Bluetooth buttons | 20. X-bass |
| 10. CD/ID3 buttons | 21. Equalizer |
| 11. Volume | 22. Source |

Manual DAB scanning

1. Turn on the unit and select DAB mode.
2. Press MENU button on the remote control to access the menu control.
3. Press the PREVIOUS or NEXT button until "MANUAL" is displayed and then press the ENTER button.
4. Press the PREVIOUS or NEXT button to select the desired channel.
5. Press the ENTER button to confirm.

FM radio operation

Auto scan

1. Turn on the unit in FM mode.
2. Press and hold the SCAN button to start auto-scanning and saving the available stations.

Manual scan

1. Press the TUNE ^ or TUNE v button repeatedly to tune to a different frequency.
2. Alternatively press and hold the TUNE ^ or TUNE v button to automatically search to the next available station.

CD/USB operation

Loading and playing CD disc

Open the CD door. Instal a disc with the CD graphic side facing up. Close the CD door. Press the SOURCHE button to CD mode. After reading the total number of tracks will be shown on the display. Press the CD/USB PLAY/PAUSE button to play.

Reading and playing USB device

Insert a USB device into the USB input jack. Press the SOURCHE button to USB mode. After reading the total of number of tracks will be shown on the display. Press the CD/USB PLAY/PAUSE button to play.

BLUETOOTH audio

1. Press the SOURCHE button repeatedly to enter the Bluetooth mode. The display will show "BT". It will start searching and will display a flashing "PAIRING".
2. If the unit has never been paired with a Bluetooth device before or cannot find the last paired device, the display and the Bluetooth status indicator will keep on flasing. Turn on the Bluetooth function of your device and enable the search until "Lenco MC-150" is found. Select "Lenco MC-150" on the Bluetooth device to make connection. Enter the pass code "0000" if required.
3. After successfully paired the unit will show "BT AUDIO" on the display.
4. You can now start playing music from your Bluetooth device wirelessly to the speakers.

AUX IN

1. Plug a AUX cable into the external player's line out and the other end into the AUX IN jack.
2. Press the SOURCHE button to enter AUX mode. The display shows "AUDIO IN".
3. Start your external player to play music.
4. The unit will output the sound.