


Remote control

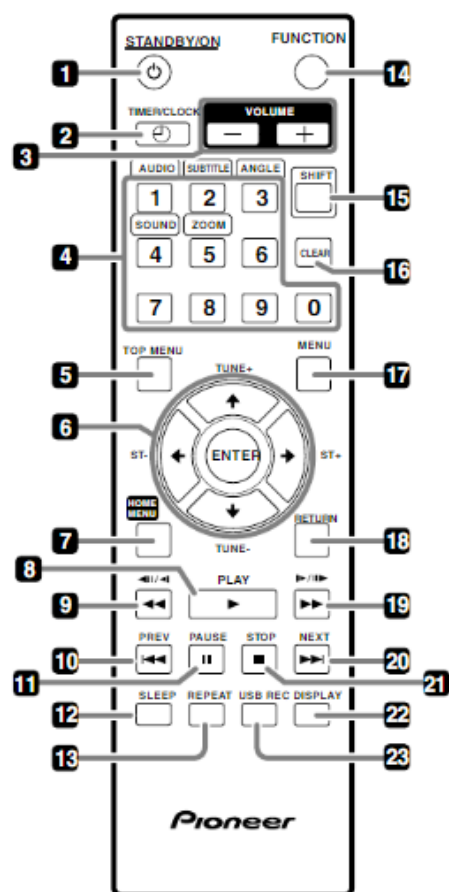

1. STANDBY/ON
2. TIMER/CLOCK
3. VOLUME: use to set the listening volume.
4. NUMBER BUTTONS
5. TOP MENU: press to display the top menu of the DVD-Video
6. $\wedge/v/</>$: Use these to select itmes, change settings and move to cursor.


ENTER: Use this to oplement the selected itme or enter a setting that you have changed.

ST +/-: Use these to select station presets

TUNE +/-: Change the frecency one step at a time. To search for stations automatically, press and hild for about a few second.

- | | |
|-------------------|------------------|
| 7. HOME MENU | 16. CLEAR |
| 8. PLAY | 17. MENU |
| 9. REVERSE | 18. RETURN |
| 10. FAST-PREVIOUS | 19. FAST-FORWARD |
| 11. PAUSE | 20. NEXT |
| 12. SLEEP | 21. STOP |
| 13. REPEAT | 22. DISPLAY |
| 14. FUNCTION | 23. USB REC |
| 15. SHIFT | |

Front/top panel

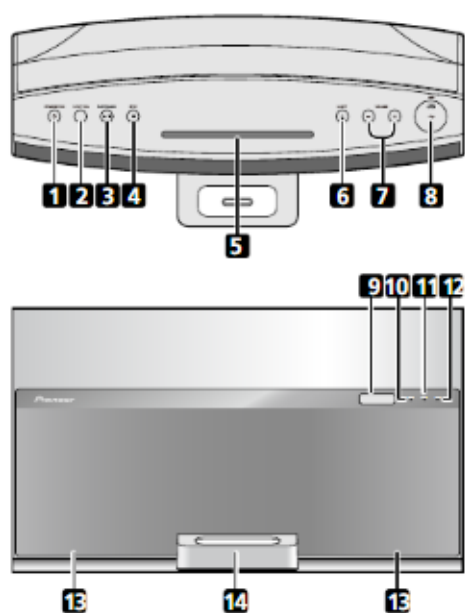

1. STANDBY/ON
2. FUNCTION: Use to select an input source. Press repeatedly to switch between iPod/iPhone, DVD/CD, USB, TUNER and external input (AUX)
3. PLAY/PAUSE
4. STOP
5. Disc slot
6. EJECT: Eject the disc.
7. VOLUME +/-
8. USB TERMINAL
9. Display
10. TIMER indicator
11. HDMI indicator
12. TUNE indicator
13. Speaker units
14. iPod/iPhone connector ports