



Device description

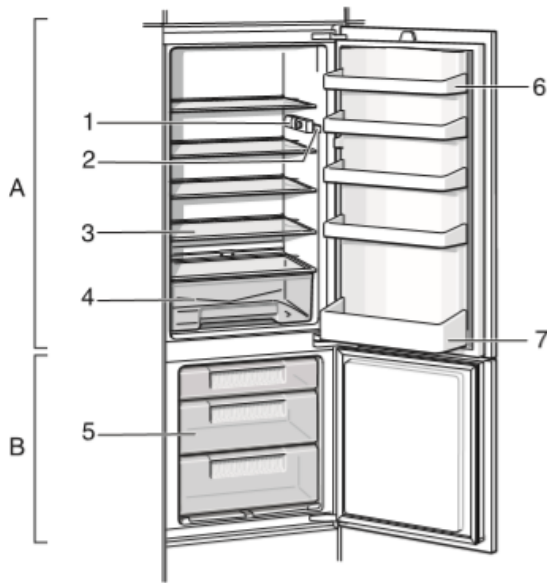

- A. Refrigerator compartment
- B. Freezer compartment
- 1. Temperature controller/light
- 2. Light switch
- 3. Glass shelf in the refrigerator compartment
- 4. Vegetable container
- 5. Frozen food container
- 6. Door shelf
- 7. Shelf for large bottles

Setting the temperature

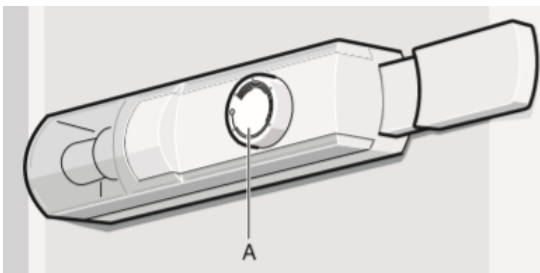

1. Turn the temperature controller (A) to the required setting.
2. Turn the temperature controller to the right for a lower temperature.
3. Turn the temperature controller to the left for a higher temperature.

Noises

- Droning: motors are running
- Bubbling, humming or gurglin noises: refrigerant is flowing trough the tubing
- Clicking: Moter, switches or solenoid valves are switching on/off

Troubleshooting

Please check wether you can eliminate the fault yourself based on the following information. When the fridge still doesn't work, you can contact the reception.

Fault	Possible cause	Remedial action
Appliance has no refrigeration capacity.	The temperature controller is in position "0".	Turn the temperature controller from position "0". Fig. 2 /A
	<ul style="list-style-type: none"> ■ Power failure. ■ The fuse has been switched off. ■ The mains plug has not been inserted properly. 	Check whether the power is on, check the fuses.

Fault	Possible cause	Remedial action
The light does not work.	The bulb is defective.	Replace bulb. Fig. 7 /B <ol style="list-style-type: none"> 1. Switch the appliance off. 2. Pull out mains plug or switch off fuse. 3. Slide cover forwards and remove. 4. Change the bulb. (Replacement bulb: 220-240 V a.c., E14 bulb holder, see defective bulb for wattage.)
	Light switch is jammed.	Check whether the light switch can move. Fig. 7 /A
Floor of the refrigerator compartment is wet.	The condensation channels or drainage hole are blocked.	Clean the condensation channels and the drainage hole. See chapter Cleaning the appliance. Fig. 8
The temperature in the refrigerator compartment is too cold.	Freezer compartment door is open.	Close the freezer compartment door.
	Too much food was placed in the freezer compartment at once.	Do not exceed max. freezing capacity.
	Temperature controller has been set too high.	Set temperature controller lower.
The refrigerating unit is switching on more frequently and for longer.	Appliance opened frequently.	Do not open the appliance unnecessarily.
	The ventilation openings have been covered.	Remove obstacles.
	Large quantities of fresh food are being frozen.	Do not exceed max. freezing capacity.