


General overview

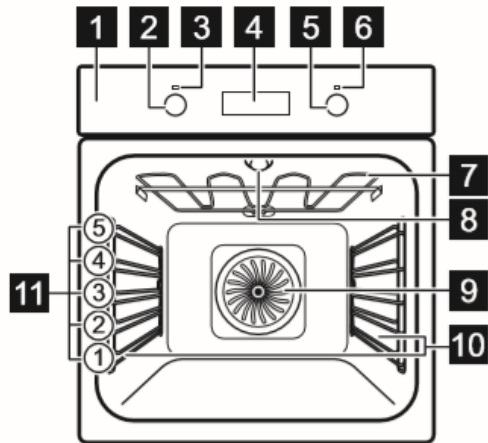


1. Control panel
2. Knob for the heating functions
3. Power lamp/symbol
4. Display
5. Control knob (for the temperature)
6. Temperature indicator/symbol
7. Heating element
8. Lamp
9. Fan
10. Shelf support, removable
11. Cavity embossment– Aqua cleaning contrainer
12. Shelf positions

Control panel

—	To set the time.
⌚	To set a clock function.
+	To set the time.

Display

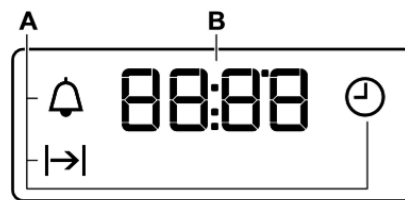

- A. Clock functions
- B. Timer

Daily use

How to set: Heating function

1. Turn the knob for the heating to select a heating function.
2. Turn the control knob to select the temperature.
3. When the cooking ends, turn the knobs to the off position to turn off the oven.

Heating functions

Oven function	Application
0 Off position	The oven is off.
 Light	To turn on the lamp.
 True Fan Cooking	To bake on up to three shelf positions at the same time and to dry food. Set the temperature 20 - 40 °C lower than for Conventional Cooking.
 Pizza Function	To bake pizza. To make intensive browning and a crispy bottom.
 Conventional Cooking	To bake and roast food on one shelf position.

Oven function	Application
 Bottom Heat	To bake cakes with crispy bottom and to preserve food.
 Defrost	To defrost food (vegetables and fruit). The defrosting time depends on the amount and size of the frozen food.
 Grill	To grill thin pieces of food and to toast bread.
 Fast Grilling	To grill thin pieces of food in large quantities and to toast bread.
 Turbo Grilling	To roast large meat joints or poultry with bones on one shelf position. To make gratins and to brown.

Troubleshooting

If there is a problem with the oven, please check the table below before contacting the reception. If you cannot find a solution to the problem yourself, please contact the reception.

Problem	Check if...
The oven does not heat up.	The fuse is blown.
The display shows "12:00".	There was a power cut. Set the time of day.
The lamp does not work.	The lamp is burnt out. Inform the reception.