

Switching on and off

Switch on

Press the 'On/Off' button on the remote control to switch the TV on. Alternatively, press the "HOME" button. You can also press the small joystick key on the back of the TV to switch the TV on.

Switch to standby

To switch the TV to standby, press the 'On/Off' button on the remote control. You can press also the small joystick on the back of the TV. In standby mode, the TV is still connected to the mains power but consumes very little energy.

Switch off


To switch off the TV completely, disconnect the power plug. When disconnecting the power plug, always pull the power plug, never the cord.

Keys on TV

To open the basic menu:

1. With the TV switched on, press the joystick key on the back of the TV to bring up the basic menu.
2. Press left or right to select 'Volume', 'Channel' or 'Sources'. Select 'Demo', to start a demo movie.
3. Press up or down to adjust the volume or tune to the next or previous channel. Press up or down to go through the list of sources, including the tuner selection.
4. The menu will disappear automatically.

Remote control

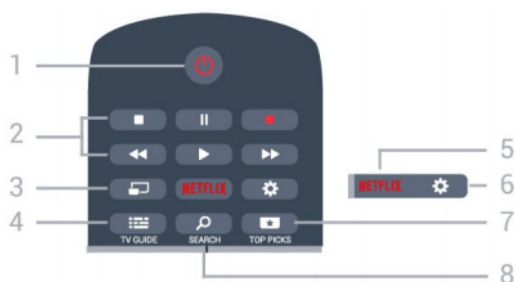

1 - Standby / On

To switch the TV on or back to Standby.

2 - Playback and Record

- Play ►, to playback.
- Pause ||, to pause playback
- Stop ■, to stop playback
- Rewind ◀◀, to rewind
- Fast forward ▶▶, to go fast forward
- Record ●, to start recording

3 - MULTIVIEW

To open a small screen in the big screen.

4 - TV GUIDE

To open or close the TV Guide.

5 - NETFLIX

To open the Netflix App directly. With the TV switched on or from standby.

6 - Settings

To open the Frequent Settings menu and All Settings.

7 - TOP PICKS

To open the menu with recommended programmes, Video on Demand (Rental Videos) or Online TV (Catch Up TV).

8 - SEARCH

To open the searches page.



1 - TV Menu

To open the TV Menu with typical TV functions.

2 - SOURCES

To open the Sources menu.

3 - Colour keys

Direct selection of options. Blue key ■, opens Help.

4 - INFO

To open or close programme info.

5 - BACK

To switch back to the previous channel you selected.

To close a menu without changing a setting.

To go back to the previous App/Internet page.

6 - TV - EXIT

To switch back to watch TV. To stop an interactive TV application.

7 - OPTIONS

To open or close the Options menu.

8 - OK key

To confirm a selection or setting. To open the channel list while watching TV.

9 - Arrow / navigation keys

To navigate up, down, left or right.

10 - HOME

To open the Home menu.



Using the TV Guide

To open the TV Guide, press the 'TV Guide' button. The TV Guide shows the channels of the selected tuner.

Press the 'TV Guide' button again to close.

1 - Mute

To mute the sound or to restore it.

2 - Volume

To adjust the volume level.

3 - Number keys

To select a channel directly.

4 - SUBTITLE

To switch subtitles on, off or to show automatically.

5 - Channel

To switch to the next or previous channel in the channel list. To open the next or previous page in Text/Teletext. To start the next or previous chapter on a disc.

6 - TEXT

To open or close Text/Teletext.