



OESTERDAM • DISHWASHER • BOSCH

Control panel

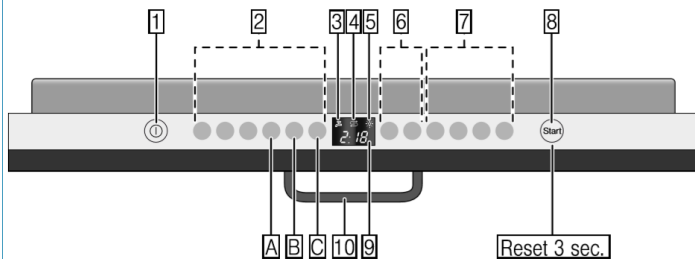

- | | |
|--|--------------------|
| 1. On/Off | 6. Time indicator |
| 2. Program button | 7. Extra functions |
| 3. Indicator light
"check water supply" | 8. START button |
| 4. Salt refill indicator
light* | 9. Display |
| 5. Rinse Aid refill
indicator light* | 10. Door handle |

*You can ignore the 'Rinse agent indicator' and/or 'Water softener indicator' when they are on. Your detergent/dishwasher tablets already contain water softener (salt) and rinse.

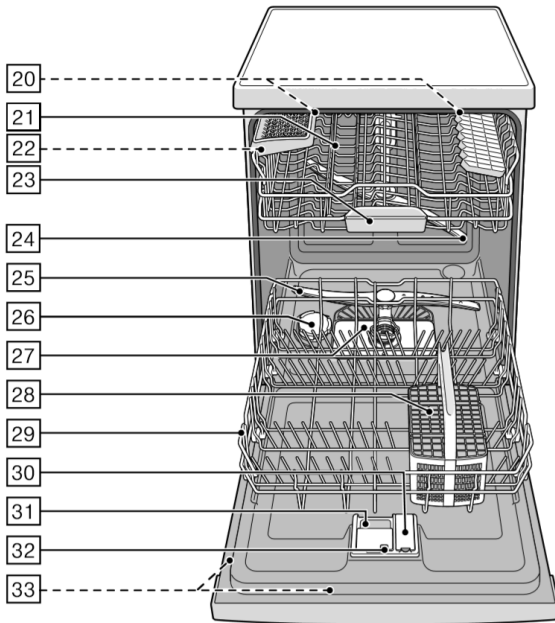

- | | |
|-----------------------|-------------------------------------|
| 20. Interior lighting | 27. Filter assembly |
| 21. Upper rack | 28. Cutlery basket |
| 22. Foldable flaps | 29. Lower rack |
| 23. Drip tray | 30. Rinse Aid dispenser |
| 24. Upper spray arm | 31. Detergent dispenser |
| 25. Lower spray arm | 32. Lock for detergent
dispenser |
| 26. Salt reservoir | 33. Rating plate |