


Control panel

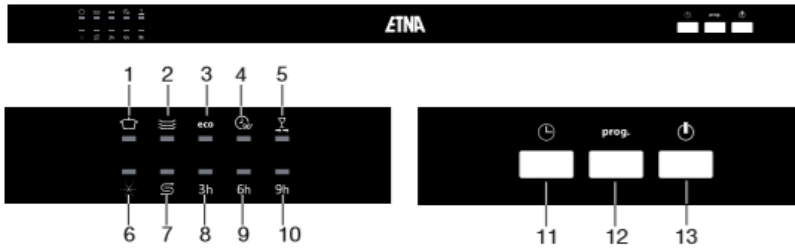


1. Intensive cycle indicator
2. Normal cycle indicator
3. Energy-saving cycle indicator
4. 90 minutes cycle indicator
5. Quick cycle indicator
6. Rinse agent indicator*

7. Water softner indicator*
8. Delayed start indicator (3 hours)
9. Delayed start indicator (6 hours)
10. Delayed start indicator (9 hours)
11. Delayed start button
12. Programming button
13. On/Off button'

**You can ignore the 'Rinse agent indicator' and/or 'Water softner indicator' when they are on. Your detergent/ dishwasher tablets already contain water softner (salt) and rinse.*

Interior

14. Upper basket
15. Lower basket
16. Salt container
17. Detergent and rinse agent reservoir
18. Cup shelf
19. Spray arms
20. Filter assembly

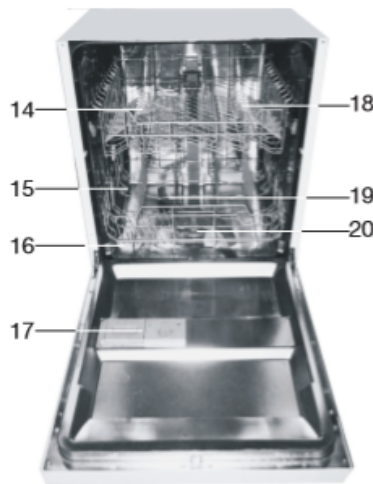

Switching on

1. Open the door to the dishwasher.
2. Add a dishwasher tablet.
3. Press the 'On/Off' button to switch on the appliance.
4. Select the desired cycle.

Press the programming button repeatedly to select the required cycle. The cycle indicator corresponding to the selected cycle will light up.

5. Close the door. The dishwasher will automatically start running the selected cycle.

Error codes

Problem	Potential cause	Solution
Quick cycle indicator flicker fleetly	Water intake time is too long.	Faucets is not opened, or water intake is restricted, or water pressure is too low. Contact the reception.
ECO cycle indicator flicker fleetly	Overflow.	Some element of dishwasher leaks. Note the code and contact the reception.

ATTENTION: Should the appliance become overfilled or exhibit excessive leaking, shut off the inlet tap and alert the reception. If all indicators are flashing simultaneously: switch off the dishwasher immediatly, shut off the inlet tap and contact the reception.