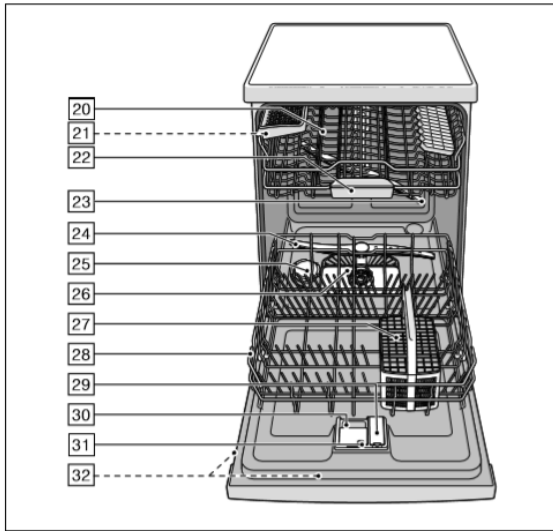
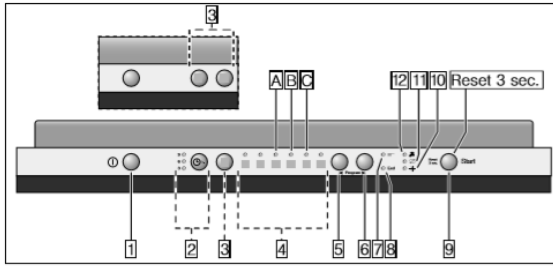


**Product description and control panel**



 
 
 

 
 
- |                                    |                              |
|------------------------------------|------------------------------|
| 1. On/Off button                   | 26. Sieves                   |
| 2. Start time selection*           | 27. Cutlery basket           |
| 3. Extra functions**               | 28. Lower basket             |
| 4. Programme**                     | 29. Rins aid reservoir       |
| 5. < button                        | 30. Detergent reservoir      |
| 6. > button                        | 31. Detergent reservoir lock |
| 7. Indication "Cleaning"           | 32. Type plate               |
| 8. Indication "End"                |                              |
| 9. START button                    |                              |
| 10. Rinse aid indication***        |                              |
| 11. Salt indication***             |                              |
| 12. "water inlet check" indication |                              |
| 20. Upper basket                   |                              |
| 21. Knife stand*                   |                              |
| 22. Tab-collection tray            |                              |
| 23. Upper spray arm                |                              |
| 24. Lower spray arm                |                              |
| 25. Salt reservoir                 |                              |

\* Depends on model

\*\*Number depends on model

\*\*\*When one of those indication lights are on, you can ignore these. The washing tablets you use, already contain salt and rinse aid.

**Programme**

Type of tableware	Type of soiling	
Pots, pans, non-sensitive crockery and cutlery.	Very soiling and lots of sticky food.	 Intensief 70°
Mixed crockery and cutlery.	Light dried and daily food.	 Normaal 65°
		 Eco 50°
Sensitive crockery, cutlery, temperature-sensitive plastics and glasses.	A little bit sticky food and fresh food waste.	 Glas 40°
		 Snel 45°
All sort of crockery.	Cold pre-rinsing, interim cleaning.	 Voorspoelen