


### Description of the washing machine

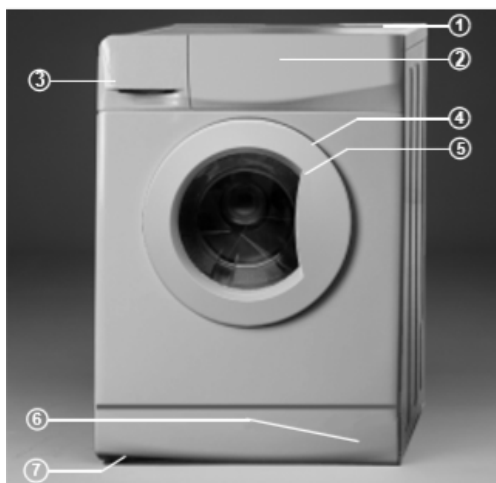

1. worktop
2. Control panel
3. Detergent dispenser
4. Service plate (inside the door)
5. Door
6. Pump access behind plinth or cover (depending on the model)
7. Adjustable feet

### Door

To open the door, hold the door handle, press the inside handle (if available on the model) and pull the door. Close the door by pressing it without excessive force until it clicks shut.

### Laundry into the washing machine

1. Open the door
2. Put the laundry one by one into the washing machine without overloading the washing machine.
3. Close the door.

### Detergent

- Prewash chamber (I)
- Main wash chamber (II)
  - \* Detergent for the main wash
  - \* Stain remover
  - \* Water softener
- Softener Chamber ('flower')
  - \* Fabric softener
  - \* Liquid starch

