

Control panel



1. Function knob
2. Power/weight button
3. Quickly preheating button
4. On/off button
5. Temperature/automenu button
6. Clock button
7. Start/pause button
8. Childlock
9. Selection knob

Microwave power levels

Power level	Food
900W	Boiling water, reheating, cooking chicken, fish, vegetables.
700W	Reheating, cooking mushrooms, shellfish and/or dishes that containing eggs and cheese.
450W	Cooking rice, soup.
300W	Defrosting, melting chocolate and/or butter.
100W	Deforsting sensitive/delicate foods, defrosting irregularly-shaped foods, softening ice cream, allowing dough to rise.

Using the microwave



1. Press the **on/off button** to activate the microwave function. *'01:00' is blinking in the display and the microwave icon appears in the display.*
2. Turn the **selection button** to set the cooking time. The max. cooking time depends on the power that has been set.
3. Press the **power/weight button** to adjust the microwave power. *'900' is blinking in the display.*
4. Turn the **selection button** to set the microwave power (between 100 W and 900 W). Press the **power/weight button** again to confirm the setting or wait for the power to stop blinking in the display. *You will hear a beep.*
5. Press the **start/pause button** to start the cooking process. *When the cooking process is ready, you will hear 5 beeps. The fan continues to operate for some time and then stops automatically.*

If you do not press the **start/pause button**, the combi microwave oven switches itself off automatically after 15 minutes.

Childlock

You can 'lock' the microwave, to prevent a cooking process from starting.

Activating the childlock

- Press the 'temperature/auto menu button' and 'start/pause button' at the same time and hold the buttons until you hear a beep.
- In the display a key icon appears. You cannot operate the microwave.

Deactivating the childlock

- Press the 'temperature/auto menu button' and 'start/pause button' at the same time and hold the buttons until you hear a beep.
- In the display the key icon disappears. You can now operate the microwave again.

Please be sure that the childlock is deactivated before you check out.